



How To: Set up your Blue Bamboo printer

This tutorial will guide you through the process of setting up your new printer, allowing you to print customer receipts.



Step 1:
Turn the Blue Bamboo printer on by pressing the power button.



Step 2:
Enable Bluetooth on your iPhone, iPod touch, or iPad by going into Settings, and tapping Bluetooth. Switch your Bluetooth setting to ON, as seen in the screen shot on the left. Your phone will now be able to locate the printer as a device that it can connect to. Tap on the name of the device that appears.



Step 3:
You will then be asked to enter the Printer's unique PIN number in order to complete the connection. This PIN number can be found inside the printer, underneath the roll of paper, as seen on the left. Simply push up on the paper-slot's door to lift open the printer.



The printer's light will turn blue, indicating that you have successfully connected. You are now able to print receipts for your customers from Flash Valet.



Now, when you are closing out a customer's ticket, an option to print the receipt will appear. You are also able to print a receipt from a ticket's details from the app's History report.



Success!



Below you will find the Blue Bamboo Printer Installation Guide for your reference. We hope this has been helpful. If you have any questions, please do not hesitate to contact us at support@flashvalet.com.

P25 Printer

Quick Installation Guide

P25 / P25-M / P25i / P25i-M

Version 4.9

Packing List



Contact your distributor for replacement parts

1

Front



To print test receipt, press mode & feed buttons at the same time.

2

Back



3

Bluetooth

Device name and PIN

- Device name and PIN label can be found under the paper roll

Discovery Modes (factory set)

- Always - Always discoverable
- 1st Connect - Discoverable until 1st connection is established
- Mode Key - Press Mode Key to make discoverable for 90 seconds


Using with Apple devices (P25i & P25i-M only)

- Press Mode Key twice to disconnect and press twice again to reconnect
- Blue LED will flash when connecting / disconnecting from Apple devices
- Supports iOS 4.0 and higher

4

Cable Connection

Connect Printer to host device using correct cable.

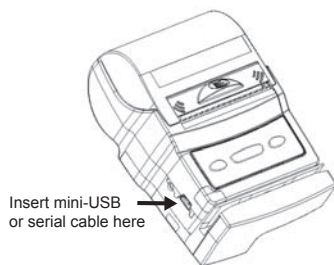

Cable/port	Host	Printer
Serial	DB9(F)	mini-USB type A
USB	USB Type A	mini-USB type B

5

LED Status Code

Blue	Constantly lit	Bluetooth module available
	Flashing	Data transaction via Bluetooth
Green	Constantly lit	Power on, normal status
	Flashing	Data transaction via USB
Red	Constantly lit	Charging
	Flashing intermittently with Blue LED	An error has occurred (see Error Code)
	Off	Charging finished

6


LED Error Code

Error description	Remedy	Indicator pattern
Out of paper	Add paper	Blue Red
The paper cover is open	Close the paper cover	
A transmission error occurred	Check the transmission status	Blue Red Red
Print head overheated	Wait until the print head cools down	Blue Red Red Red
Battery voltage is too low	Recharge the battery	Blue Red Red Red Red

7

MSR (P25-M & P25i-M only)


1. Ensure the magnetic stripe faces away from the printer.
2. The magnetic stripe reader (MSR) can read tracks 1/2/3 in both directions (bidirectional).
3. MSR data can be transmitted via Serial, USB, or Bluetooth.

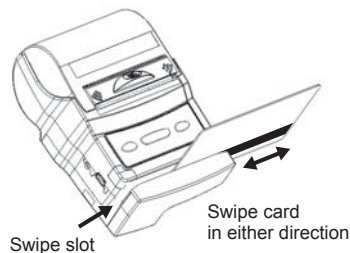

8

Load Paper

1. Open the lid.
2. Insert the shaft into the paper roll.
3. Install paper roll with paper pointing up.
4. Pull out a small amount of paper, close lid.

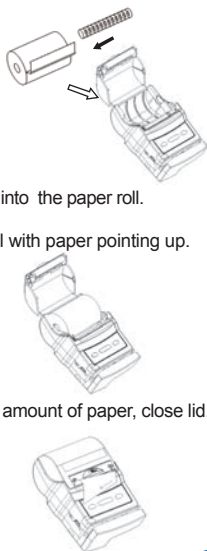


9

Install Battery

The battery pack is located at the bottom of the printer. To install it please follow these steps:

1. Remove the rugged case.
2. Remove the battery pack as shown below.
3. Remove the battery contact guard from battery.
4. Reinstall battery and rubber case.

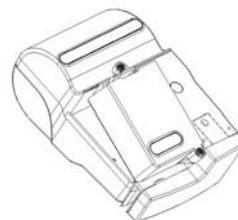


10

Charge Printer

1. Insert the DC plug of power adapter into the power jack of printer.
2. Insert the AC plug of power adapter into AC outlet.
3. When charging the LED will be red, when the battery is fully charged, the LED will turn off.

Note: Please make sure the battery contact guard is removed before charging for the first time. See Install Battery.

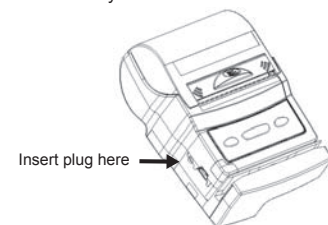

11

Remove Rugged Case

1. Hold the printer with rugged case by the sides.
2. Pop two fingers under the printer, then pull the printer out of the case.



Note: Please don't peel off the rugged case from the printer.

12

Optional Accessories

Carrying Case



Car Charger



Contact your distributor for more information.

13

Caution

WARNING:

- Do not disassemble the Printer, battery or AC adapter. Only qualified technicians may service the device.
- Do not use batteries, AC adapters or Printer near water.

For warranty period, repair and service issues, please contact your distributor:



14